

PURCHASING INFORMATION & PRODUCT SPECIFICATIONS

LIDS™ STAGING SHELTER

PART NUMBER

WFI-LIDS -SS-T

NATIONAL STOCK NUMBER

8145-01-529-9024

SHIPPING INFORMATION

Shipping information can be requested by contacting Wel-Fab Inc. ® on our toll free number at 888-275-0881 or by e-mailing our Business Manager pielstone@wel-fab.com

PURCHASING INFORMATION

MAILING ADDRESS:

Wel-Fab, Inc.®
P.O. Box 86
Lumberton, NJ 08048

PHONE/FAX:

Phone: 888-275-0881 (Toll Free)
Fax: 609-267-6751

FAXED QUOTE REQUESTS:

609-267-6751

When faxing us your quote request please ensure your request is sent on agency letterhead with all customer contact information on it, to help us ensure timely response to your quote request.

FOR ORDER CONFIRMATION:

For order confirmation information, shipping information, by contacting Wel-Fab Inc. ® on our toll free number at 888-275-0881 or by e-mailing our Business Manager pielstone@wel-fab.com

TECHNICAL INFORMATION/QUESTIONS:

Contact Paul Elstone, Sr. at paulelstone@wel-fab.com



LIDS™ STAGING SHELTER

Wel-Fab, Inc and Air Cruisers Company joined forces to develop the new Lightweight Inflatable Staging Shelter for use at deployable Contamination Control Areas (CCA) supporting Emergency Response personnel.

The Lightweight Inflatable Staging Shelter unit was specifically designed and engineered for today's quick response Emergency Response personnel. This system provides a controlled area where personnel can be assembled prior to decontamination procedures, and serve as a central staging/collection points for incident responses, or forward deployed operating stations.

The Lightweight Inflatable Staging Shelter consist of two lightweight inflatable shelters which are 10' x 10' x 8' size, with fully inclosed canopies. These shelters are joined together with quick disconnect snaps to form a 10' x 20' x 8' shelter once inflated with the blower/vacuum system in approximately 60 seconds. Additional shelters can be added if larger structures are needed

The Staging Shelter can be fully enclosed on all four sides and the Environmental Control Unit (ECU) Heating/Cooling Integration Chute can be used to control the temperature within the shelter.

Shelter sides or ends can be rolled scan up to allow air flow into the shelter based on the wind direction, as required. This shelter significantly reduces exposure of personnel to high heat conditions (direct sunlight), rain, and high winds.

The benefits of owning this ultimate Staging Shelter system translate into unparalleled logistic improvements, including a smaller unit response footprint; reduced setup/breakdown times, and fastest relocation times during extremely austere and diverse emergency response conditions within all types of field operations.

LIDS™ STAGING SHELTER

Configuration and Performance Data:

- **Rapid Deployment and Setup:**
 - 2 LIDS Shelters provided with system
 - Complete system set up by 2- personnel in under 15 minutes
 - Each shelter structure inflates in 60 seconds or less
- **Protective Shelters Canopies:**
 - Environmental Control Unit (ECU) Heating/Cooling Integration Chute (closed shelters)
 - Roll up canopy panels (closed shelters)
- **Multi Surface Setup/Anchoring Capabilities:**
 - **Soft Surfaces (Grass/Dirt):** Weight Bag Kit, Water Bags, and Spike Stakes
 - **Hard Surfaces (Concrete/Black Top):** Weight Bag Kit, Water Bags
- **Interior and Exterior Lighting System:**
 - 4 Water Resistant, Tube Lights
- **Industry Leading System Warranty:**
 - Initial 3 year warranty
 - Extendable up to 9 years with 3 year maintenance service contracts



CHEMICAL

BIOLOGICAL

RADIOLOGICAL


NUCLEAR

EXPLOSIVE

LIDS™ CBRNE

SYSTEM TECHNICAL INFORMATION

LIDS STAGING SHELTER
 PN: WFI-LIDS-SS-T
 NSN: 8145-01-529-9024

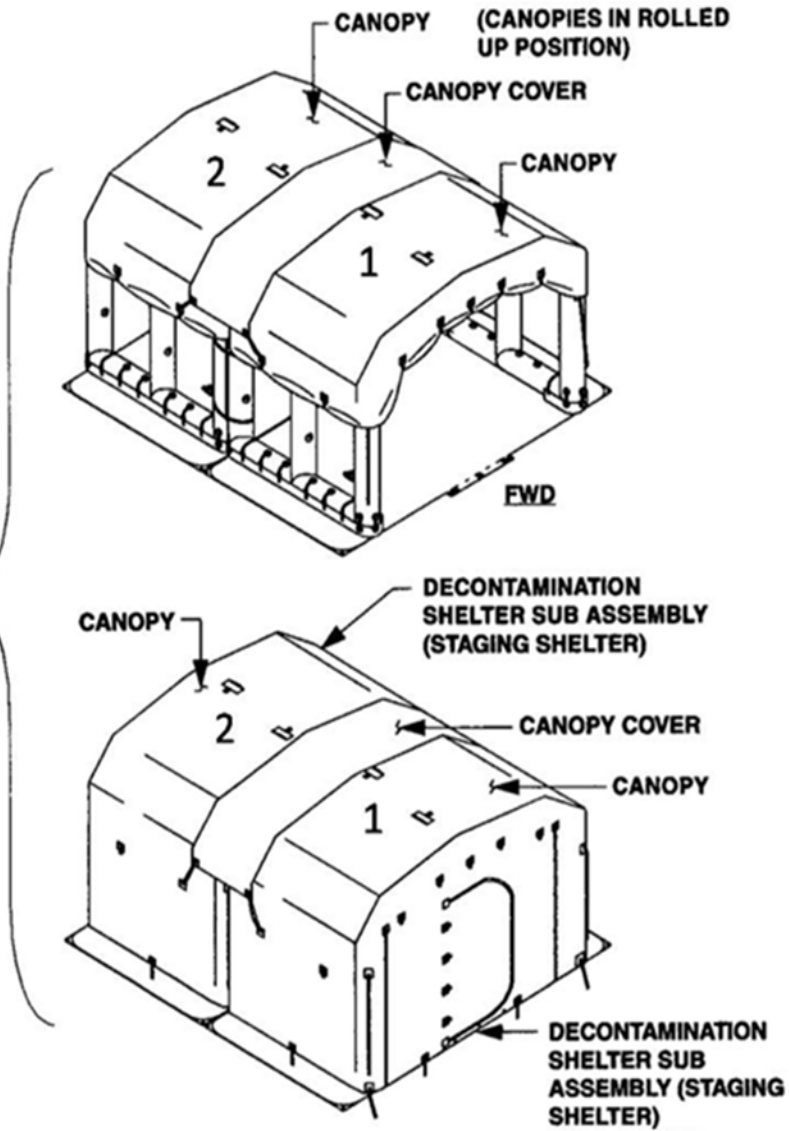

| LIDS™ Staging Shelters | Quantity | Remarks |
|---|----------|---------|
| Shelter 1 Red Zone--Seating Area (10'X10') | 1ea | |
| Shelter 2 Red Zone--Seating Area (10'X10') | 1ea | |
| Shelter 1-2 Canopy Cover | 1ea | |
| | | |
| | | |
| | | |
| | | |
| | | |
| See Reverse Side for Staging Shelter Components | | |

LIDS™ Staging Shelter

| Components | Quantity | Components | Quantity |
|------------------------------------|----------|---------------------------------------|----------|
| Non-Collapsible Container, WFI-AMC | 1ea | Electrical Adapter, 3-Way | 2ea |
| Fan, Electric 110volt | 1ea | Internal/External Tube Lights | 4ea |
| Electrical Cords, Extension 50ft | 2ea | Electrical Cord, Extension Reel, 80ft | 1ea |
| Folding Chairs | 16ea | Stake Bags, (30) stakes (1) hammer | 1ea |
| Repair Kit | 1ea | Mops | 1ea |
| Bucket, Mop 2.5gal | 1ea | Blower/Vacuum 110volt | 1ea |
| Bag, Nylon Cloth | 1ea | Bags, Water | 16ea |

